

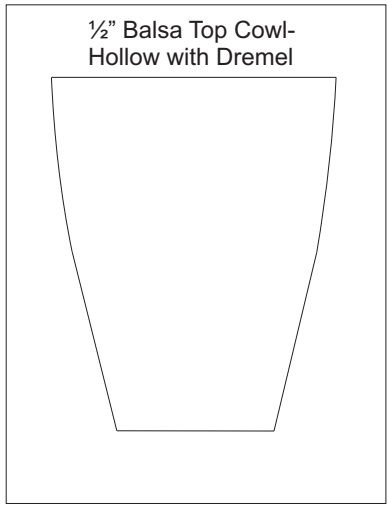
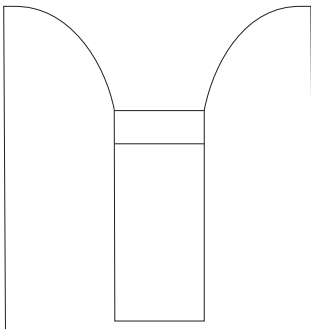
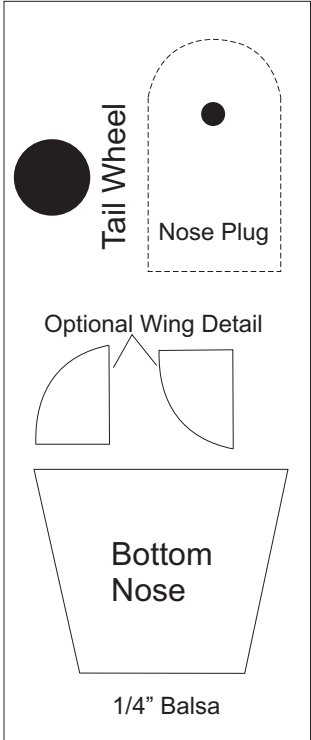
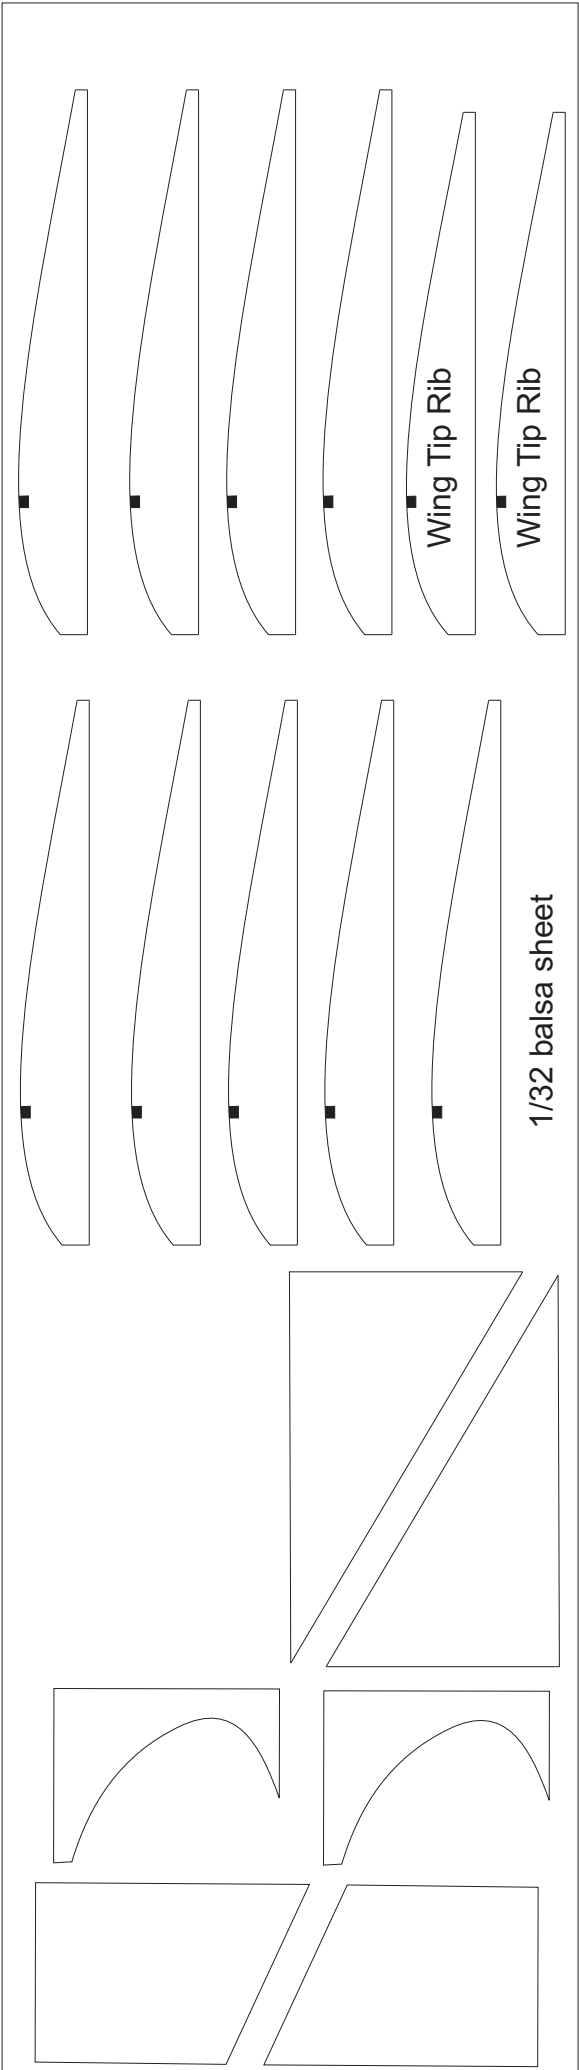




Print parts onto Avery removable label full sheets #365572-stick to balsa sheets and cut out parts.

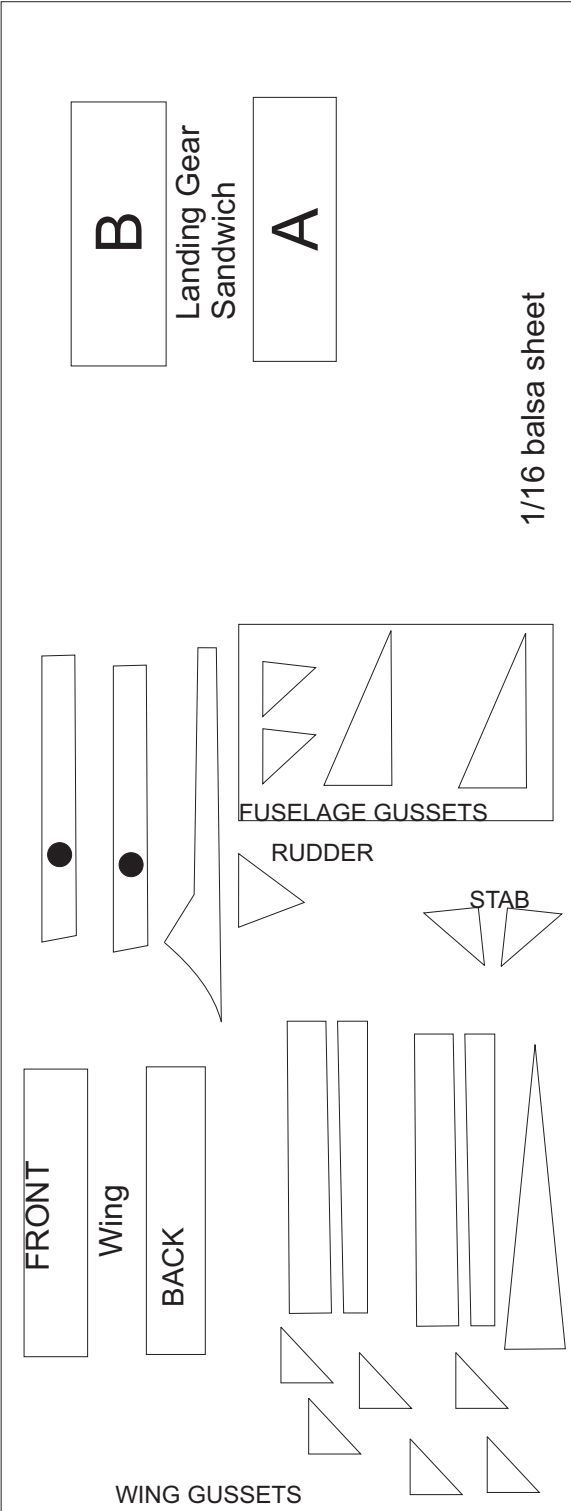

Bond paper wing detail-cover with tissue and glue to ribs as shown on plans.

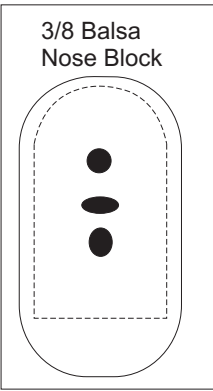

Draw Braces with  
Black Marker

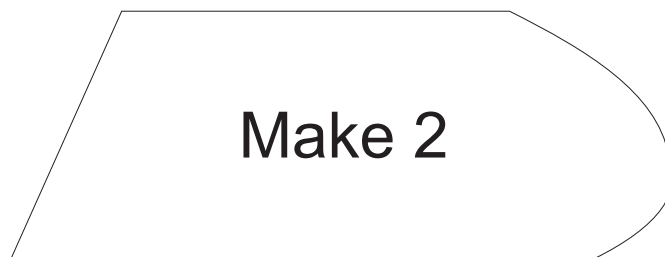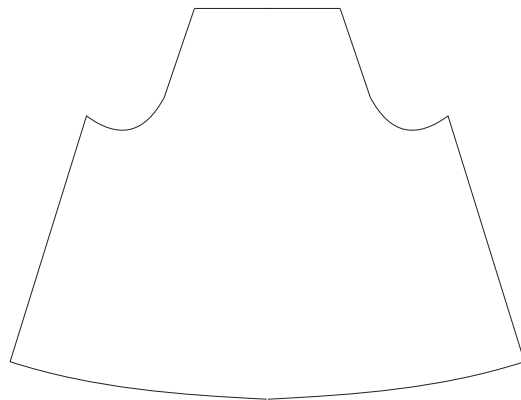

Windshield Pattern  
.003 Acetate